


# Recording

The recorder provides five folders, **A**, **B**, **C**, **D** and **E**, and each message recorded in a folder is saved as a Digital Speech Standard (DSS) file or a Windows Media Audio (WMA) file. These five folders can be selectively used to distinguish the kind of recording; for example, Folder **A** might be used to store private information, while Folder **B** might be dedicated to holding business information. Up to 199 messages can be recorded per folder (see P.61). Stereo recording is possible, only when set to stereo HQ and stereo SP mode.


Built-in stereo  
microphone

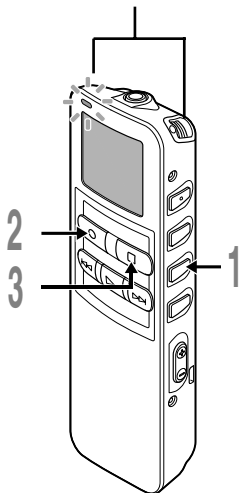

## 1 Press the **FOLDER** button to choose a folder.

The folder name is displayed.


- a Total number of recorded files in the folder
- b Current file number
- c Current folder

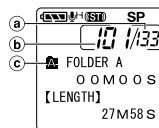


## 2 Press the **REC** button to start recording.

The record/play indicator lamp glows red. Turn the built-in stereo microphone in the direction to be recorded. The display changes depending on the recording mode (see P.22).

- d Current recording mode
- e Recording time
- f Remaining recording time

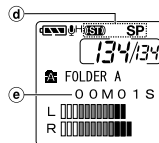

Display in the  
stereo recording  
mode

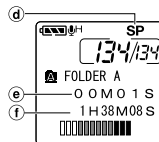

Display in the  
monaural  
recording

## 3 Press the **STOP** button to stop recording.

## Notes

- To ensure recording from the beginning, start speaking after you see the red record/play indicator lamp on.
- A beep will sound when remaining recording time reaches 60 seconds, 30 seconds, and 10 seconds while recording.
- “MEMORY FULL” or “FOLDER FULL” will be displayed when the memory or folder capacity is full. Delete any unnecessary files before recording any further (P.51) or transfer voice files to your computer using DSS Player Software (P.86).
- DSS format in SP and LP mode recording, and WMA format in stereo HQ and stereo SP and HQ mode recording.
- While recording, pressing the PLAY button stops recording and plays back the current file.

## Recording functions

### Pause

Press the **REC** button while recording.

➡ “REC PAUSE” will flash on the display.

- The recorder will time out after 2 hours when left in “REC PAUSE”.

### Resume Recording

Press the **REC** button again.

➡ Recording will resume at the point of interruption.