 


Erasing

Erasing One File at a Time

A selected file can be erased from a folder.

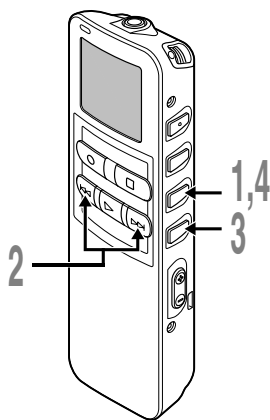

1 Press the **FOLDER** button to choose a folder.

 
2 Press the **FF** or **REW** button to choose the file you want to erase.

 
Ⓐ File to be erased

3 Press the **ERASE** button.
“CANCEL” is flashing.


4 Press the **▼** button to choose the “START”.

“START” is flashing. When the **▲** button is pressed, it will return to the flashing display of “CANCEL”.

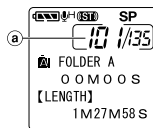

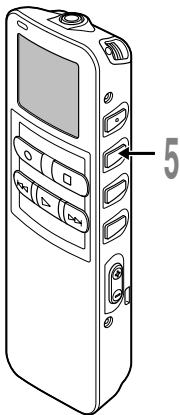

 - 5 Press the MENU/SET button while “START” flashing.**
The display changes to “FILE ERASE!” and erasing will start.

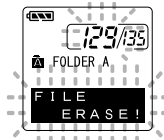

“ERASE DONE” is displayed when the file is erased. File numbers will be reassigned automatically.

5

Erasing

Notes

- An erased file cannot be restored.
- The file set to erase lock will not be erased (☞ P.55).
- If operation is not executed for 8 seconds during the setting, it will return to the stop status.
- Completion of erasing may take 10 seconds. Never do anything during this period because data may be corrupted. Removing or setting batteries is not permissible, whether or not the batteries are set in the recorder.